

Equipment Operating Instructions

For Operating and Cleaning



TILITING STEAM KETTLE			
Department / Area:	Date Created:	Review / Revised date:	
Nutrition & Food Services	January 16, 2014	March 1, 2018	
Safe Work Procedure Manual:			
FS-EOI-517			

Personal protective equipment / devices required / other safety considerations:	
Not necessary	

Operating Instructions:

- 1. Read vacuum/pressure gauge before turning on kettle.
- Gauge should be in the green zone. If needle is in the "Vent Air" zone, refer to kettle venting
 instructions. Once heated, normal operating pressure is approximately 10-12 PSI while cooking a
 water-base product.
- 3. Ensure electrical service to the kettle is turned on at the fused disconnect switch.
- 4. Preheat kettle by turning ON/OFF switch to desired temperature setting.
- 5. The heat indicator light (green) will remain lit until temperature is reached.
- 6. When the green light goes off, elements are off and preheating is complete.
- 7. Place food products into kettle. The green light will cycle on and off indicating the elements are cycling on and off to maintain the set temperature.
- 8. Do NOT fill kettle above recommended level marked on outside of kettle.
- 9. Each kettle is equipped with marine lock to prevent accidental tilting.
- 10. When cooking is complete, turn ON/OFF switch to OFF.
- 11. Pour contents of kettle into appropriate containers by tilting kettle forward. Pour slowly enough to avoid splashing.

Cleaning Instructions:

12. See and follow Safe Work Procedures for "Electric Tilting Steam Kettle – Cleaning" immediately after food is removed.