


Electrode Placement for Inpatient Telemetry

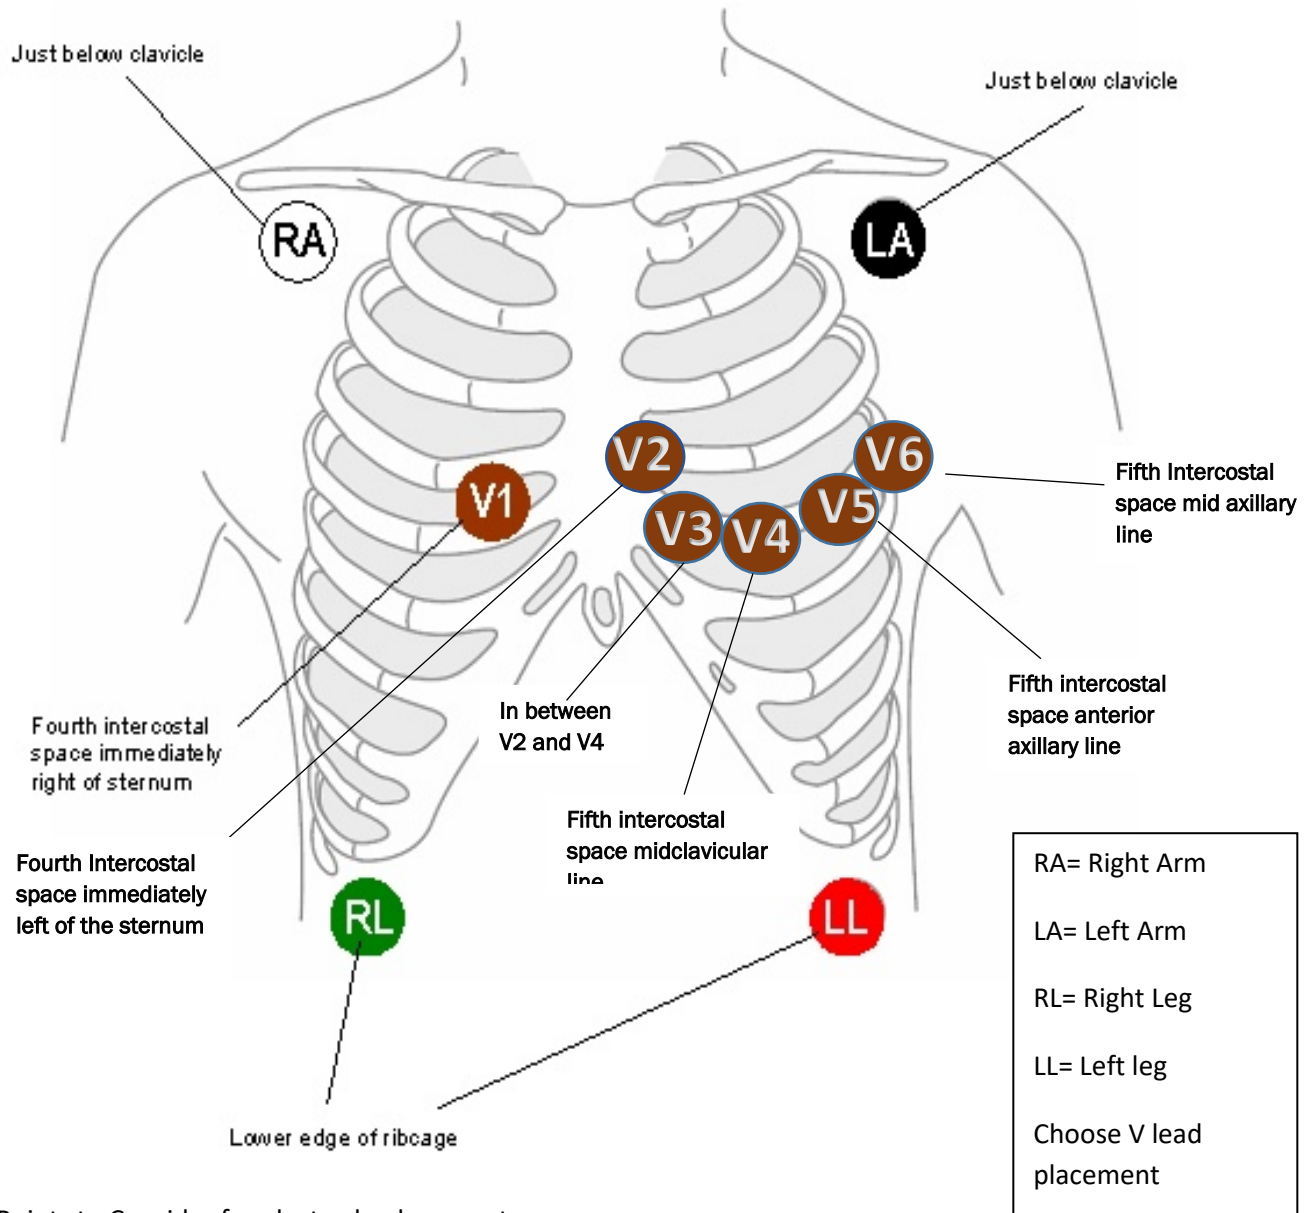

Points to Consider for electrode placement:

1. Avoid placing RA, LA, RL, LL electrodes over bony prominences, find a fleshy area (eg. under clavicles, below ribs, above hip bones)
2. Ensure the RA/LA and RL/LL electrodes are placed mirrored to each other
3. Choose one of the V lead positions (V1-V6) for your 5th electrode
 - a. V3 for patients with cardiac chest pain.
 - b. V1 for all other patients
 - c. V6 as alternate if patient has surgical sites or wounds obstructing V1 and V3 placement